

## TEVO MAXI TABLETS

### ESPRESSO MACHINE CLEANING TABLETS

#### PORTION CONTROL

A convenient portion controlled dose, Tevo Maxi tablets can be used to replace traditional espresso machine cleaning powders.

#### HIGH PERFORMANCE

One tablet in the group head removes coffee oils, grounds and stains, improving the taste and aroma of espresso after the machine is cleaned. Tevo Maxi tablets also leave no trace of odour.

#### CERTIFIED FOR ORGANIC USE

Tevo Maxi Tablets are registered by Biological Farmers of Australia (BFA) as an allowed input in organic systems and are certified by the Organic Materials Review Institute (OMRI). Tevo Maxi Tablets are free from phosphate and Genetically Modified Organisms.


#### RAPIDLY BIODEGRADABLE

All Tevo Maxi Tablet ingredients are all rapidly biodegradable meeting international standards.

#### HOW TO USE



##### PROCEDURE TO BACK-FLUSH EACH DELIVERY GROUP

- Remove coffee filter from group handle, and replace with blind filter.
- Add one Tevo Maxi tablet into the group handle & insert as if brewing espresso.
- Start cycle and allow to run for 10 seconds to dissolve the tablet.
- Stop cycle and allow to sit for 10 seconds.
- Start and stop cycle 6 more times - run for 10 seconds, stop for 10 seconds.
- Remove the group handle and rinse well under stream of water from delivery group. Turn off.
- Re-insert handle with blind filter, start and stop cycle 10 times - run for 5 seconds, stop for 2 seconds to ensure thorough rinsing. Remove blind filter and insert regular filter.
- Brew and discard a single espresso to re-season machine.



#### SAFE FOR YOU AND YOUR MACHINE

Safe for all machine parts, Tevo Maxi is listed with NSF Protocol P152. It has been tested, evaluated and passed the most stringent toxicology and corrosivity standards. The ingredients and formulation of the products that are NSF certified are safe, leave no harmful residues and do not cause corrosion within the coffee machine.

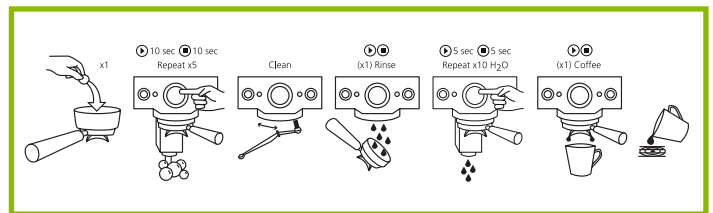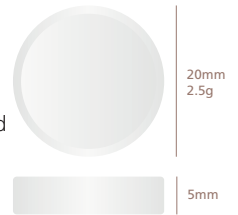

#### WATCH THE HOW TO VIDEO HERE

<https://www.youtube.com/watch?v=INMBpUJZJpw>

#### PROCEDURE TO CLEAN FILTERS AND GROUP HANDLES

- Dissolve 2 Cleaning Tablets in 500ml of hot water from the machine's boiler. Soak group handles & filters for 10 minutes. Rinse thoroughly in running hot water.

PRODUCT	TYPE OF UNIT PACK	NET UNIT WEIGHT	# OF UNITS PER CASE	PRODUCT CODE / INDIVIDUAL	PRODUCT CODE / CASE	GROSS CASE WEIGHT
Tevo Maxi Tablets	Jar	2.5kg (0.088oz)	12	E27841	E27852	5.6kg (12.35lbs)